


Auxiliary heater B2L*, without programmable timer, from April 1992

Relay location



For relay location and multiple connectors location see also section "component locations".

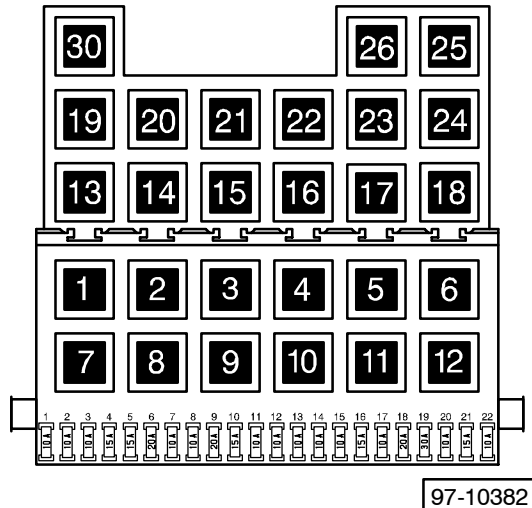

Fuse colors

30A – green
25A – white
20A – yellow
15A – blue
10A – red


* – Type 20168901, see identification plate

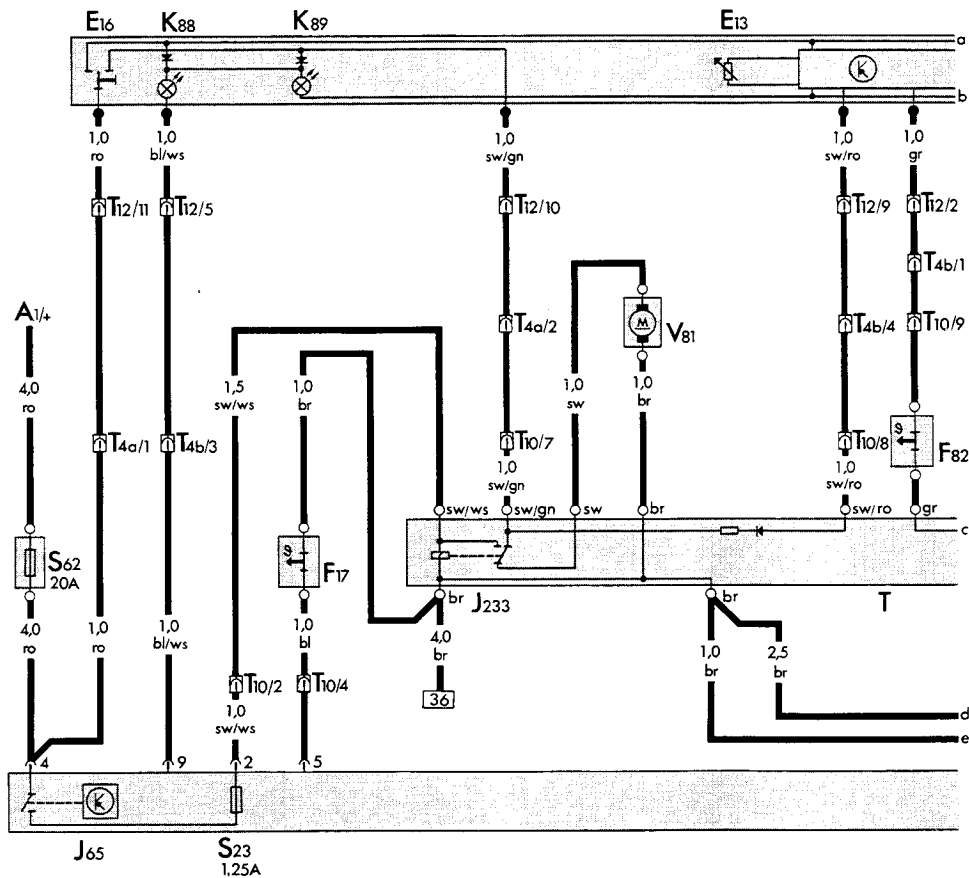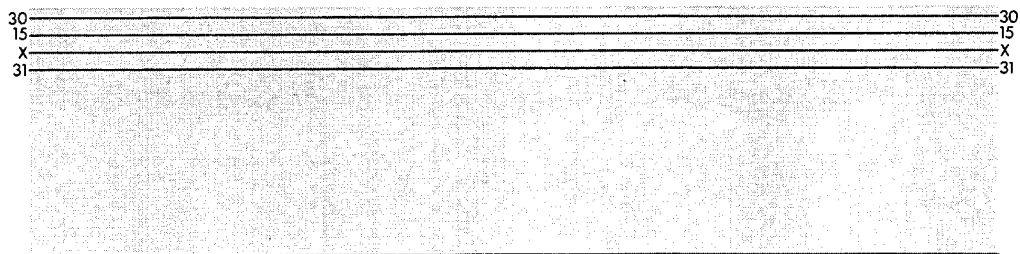

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow


1 2 3 4 5 6 7 8 9 10 11 12 13 14 97-8956

- | | |
|--|---|
| <p>A1 – Auxiliary Battery</p> <p>E13 – Heater-Time Temperature Control Switch, on left B-pillar, upper part</p> <p>E16 – Heater Switch</p> <p>F17 – Heater Overheat Control Switch</p> <p>F82 – Temperature Limiting Switch, in heater</p> <p>J65 – Heater Control Module, below driver's seat*</p> <p>J233 – Auxiliary Heater Blower Relay</p> <p>K88 – Malfunction Light (red)</p> <p>K89 – On Light (green)</p> <p>S23 – Heater Fuse</p> <p>S62 – Auxiliary Heater Fuse**</p> <p>T – Junction Box (printed circuit board)</p> <p>T4a – 4-Pin Connector, below driver's seat*</p> <p>T4b – 4-Pin Connector, below driver's seat*</p> | <p>T10 – 10-Pin Connector, below driver's seat*</p> <p>T12 – 12-Pin Connector, behind left B-pillar trim, upper part</p> <p>V81 – Fresh Air/Heater Blower</p> <p>* – Located behind lower part of left B-pillar trim on vehicles with swivel seat</p> <p>** – Located on lower part of left B-pillar on vehicles with swivel seat</p> |
|--|---|

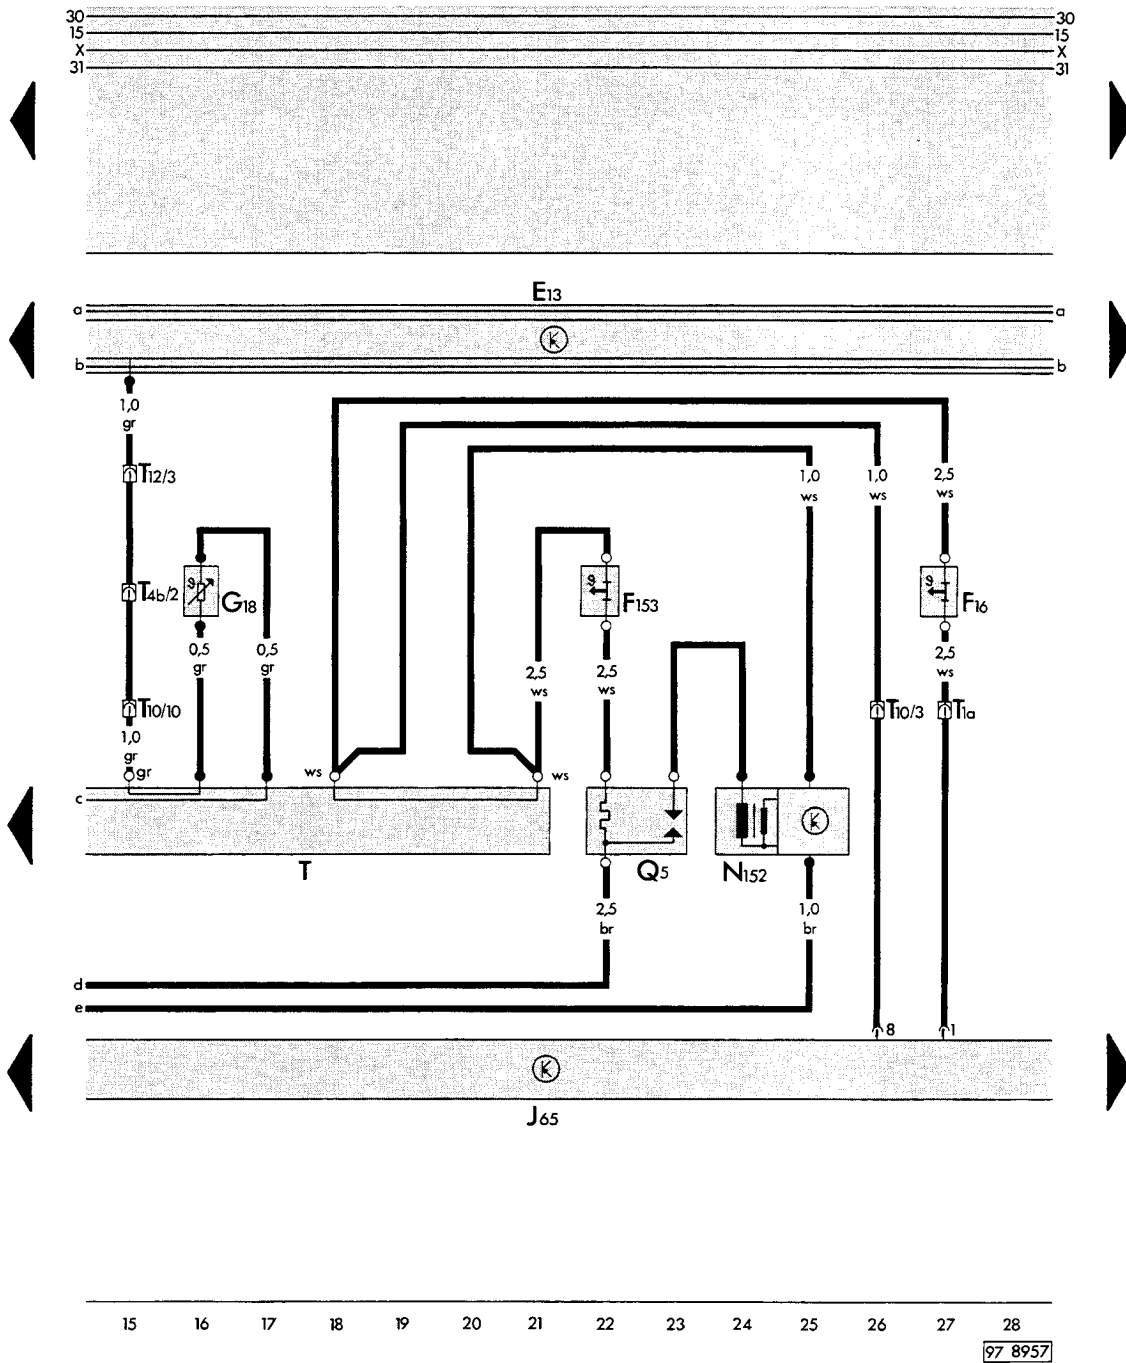

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E13 – Heater-Time Temperature Control Switch, on left B-pillar, upper part
 F16 – Heater Flame Sensor
 F153 – Glow Plug Thermoswitch
 G18 – Temperature Sensor II
 J65 – Heater Control Module, below driver's seat*
 N152 – Ignition Coil
 Q5 – Glow/Spark Plug
 T – Junction Box (printed circuit board)
 T1a – Single Connector, below driver's seat*
 T4b – 4-Pin Connector, below driver's seat*
 T10 – 10-Pin Connector, below driver's seat*
 T12 – 12-Pin Connector, behind left B-pillar trim, upper part
 * – Located behind lower part of left B-pillar trim on vehicles with swivel seat

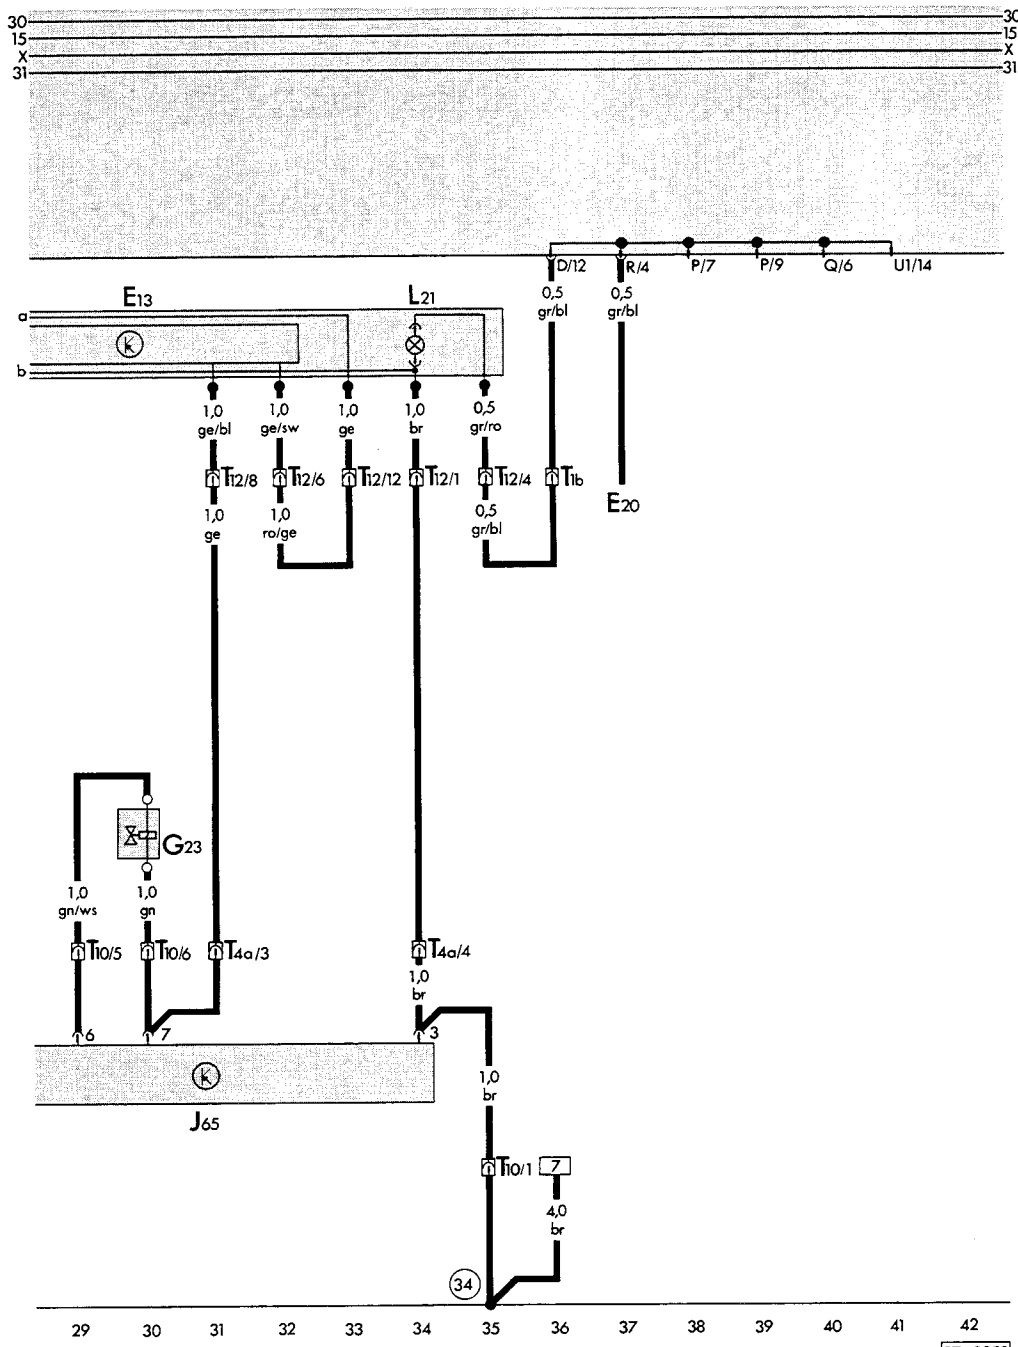

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

- E13 – Heater-Time Temperature Control Switch, on left B-pillar, upper part
- E20 – Instrument Panel Light Dimmer Switch
- G23 – Transfer Fuel Pump (FP)
- J65 – Heater Control Module, below driver's seat*
- L21 – Heater Control Lever Light
- T1b – Single Connector, below driver's seat*
- T4a – 4-Pin Connector, below driver's seat*
- T10 – 10-Pin Connector, below driver's seat*
- T12 – 12-Pin Connector, behind left B-pillar trim, upper part

(34) – Ground connection, below driver's seat*

* – Located behind lower part of B-pillar trim on vehicles with swivel seat

97- 8958