


Auxiliary heater D2L*, without programmable timer, from August 1992

Relay location


 
For relay location and multiple connectors location see also section "component locations".

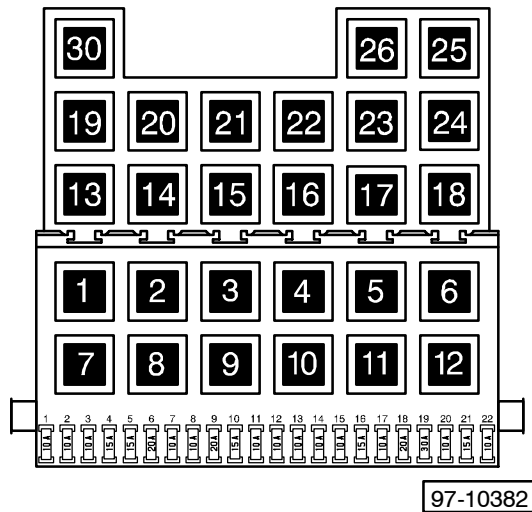

Fuse colors

30A – green
25A – white
20A – yellow
15A – blue
10A – red

* – Type 25172501, see identification plate

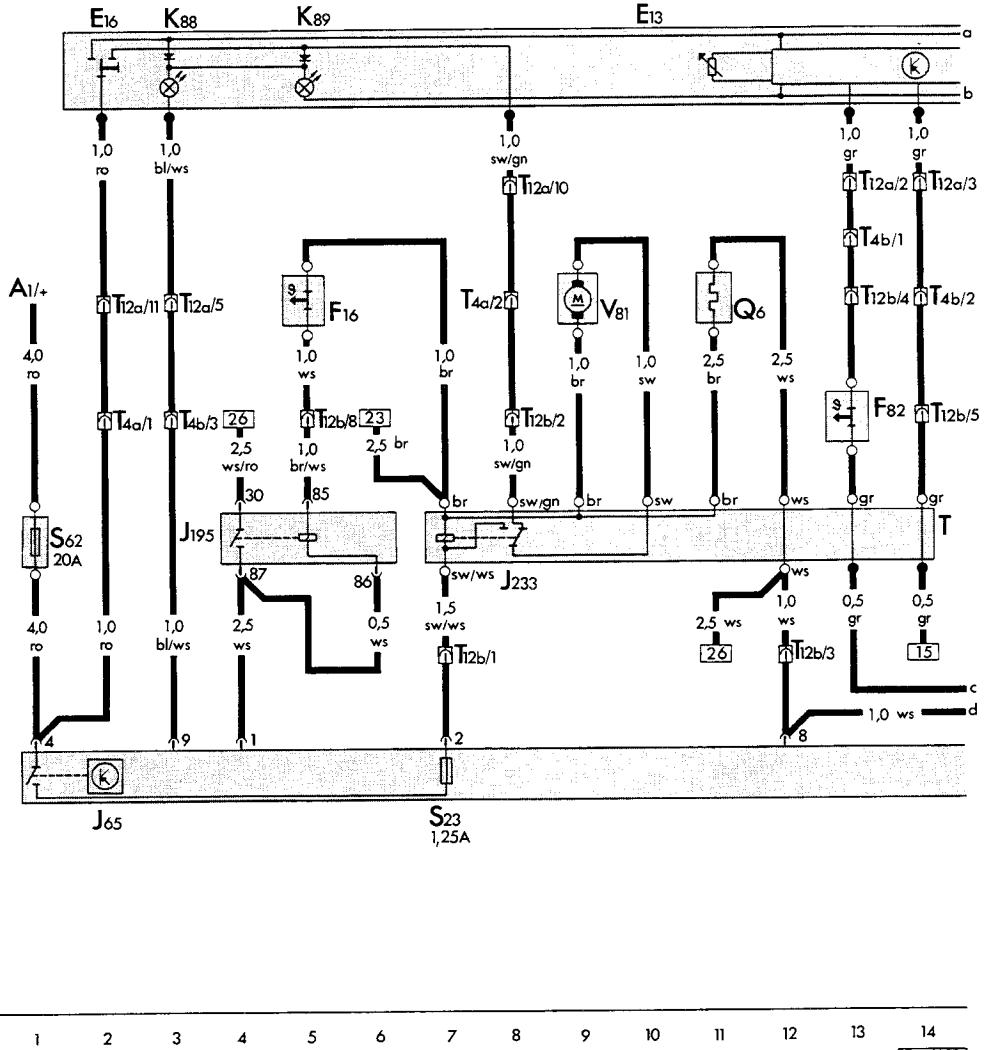


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

- A1 – Auxiliary Battery
- E13 – Heater-Timer Temperature Control Switch, on left B-pillar, upper part
- E16 – Heater/Heat Output Switch
- F16 – Heater Flame Sensor
- F82 – Temperature Limiting Switch, in heater
- J65 – Heater Control Module, below driver's seat*
- J195 – Glow Plug Control Relay, below driver's seat*
- J233 – Auxiliary Heater Blower Relay
- K88 – Water Heater Malfunction Light (red)
- K89 – Water Heater On Light (green)
- Q6 – Engine Glow Plug
- S23 – Heater Fuse
- S62 – Auxiliary Heater Fuse, below driver's seat**

- T – Junction Box (printed circuit board)
- T4a – 4-Pin Connector, below driver's seat*
- T4b – 4-Pin Connector, below driver's seat*
- T12a – 12-Pin Connector, behind left B-pillar trim, upper part
- T12b – 12-Pin Connector, below driver's seat*
- V81 – Fresh Air/Heater Blower

- * – Located behind lower part of left B-pillar trim on vehicles with swivel seat
- ** – Located on lower part of left B-pillar on vehicles with swivel seat

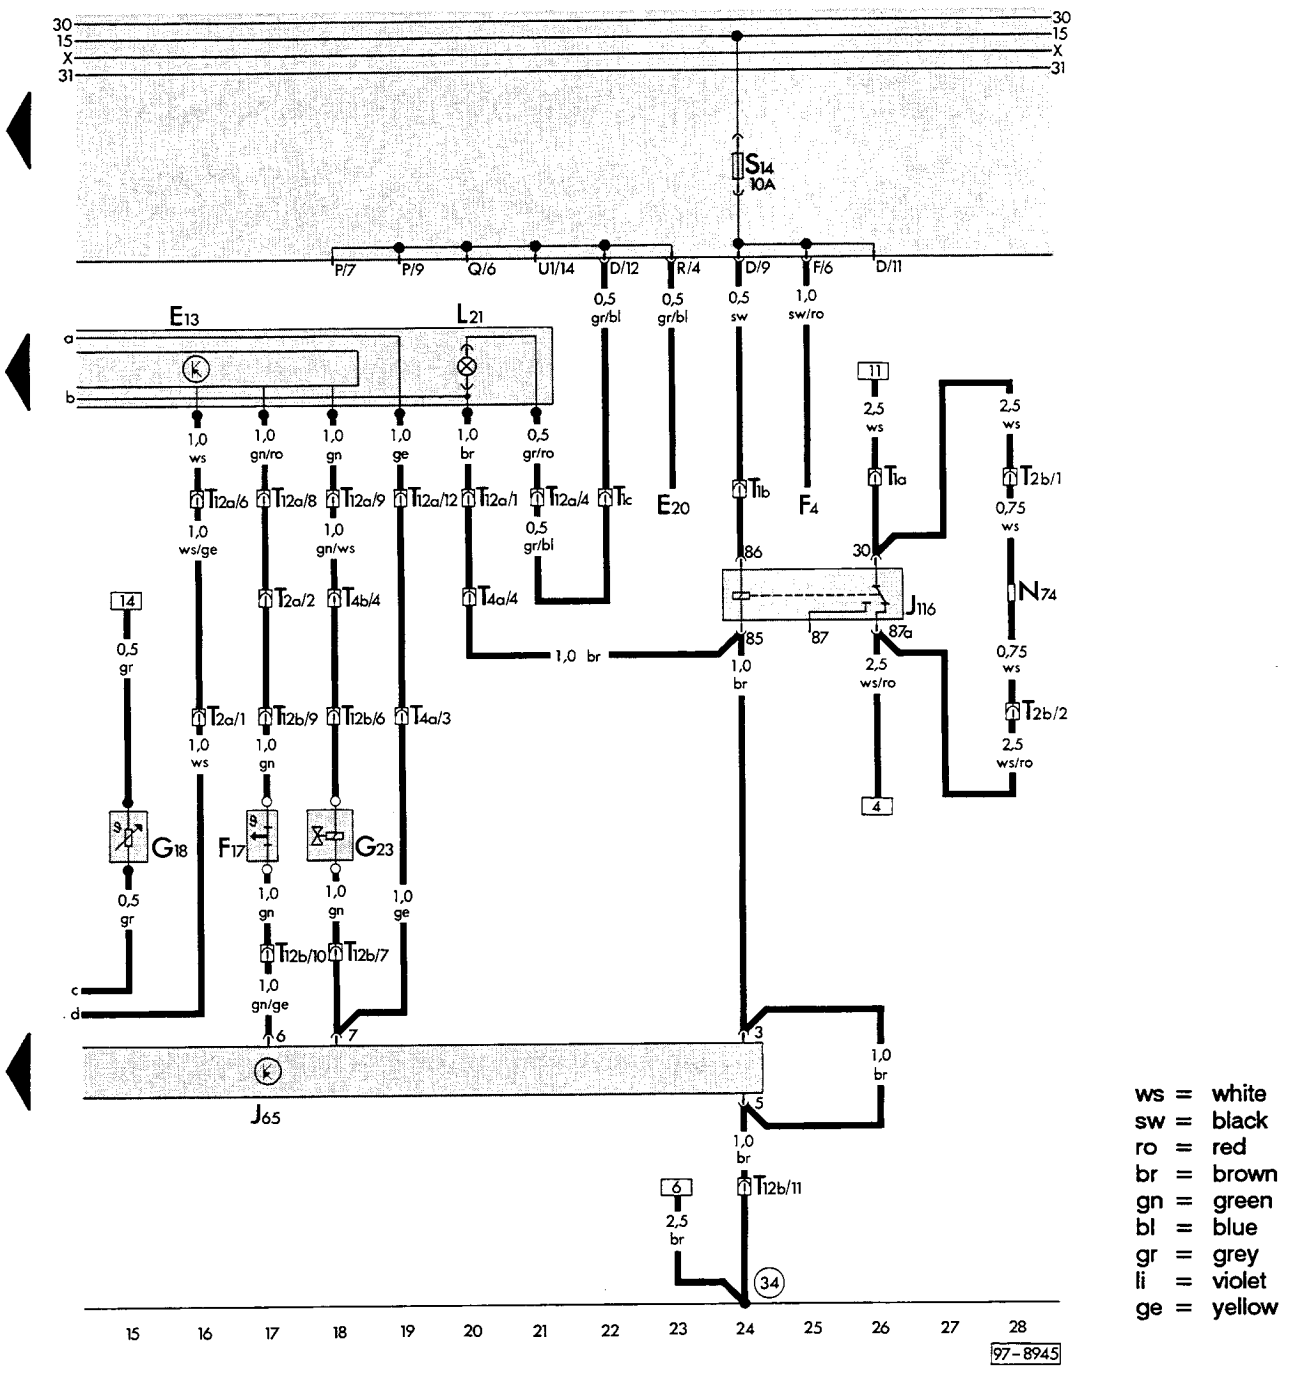

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

- E13 – Heater-Time Temperature Control Switch, on left B-pillar, upper part
- E20 – Instrument Panel Light Dimmer Switch
- F4 – Back-Up Light Switch
- F17 – Heater Overheat Control Switch
- G18 – Temperature Sensor II
- G23 – Transfer Fuel Pump (FP)
- J65 – Heater Control Module, below driver's seat*
- J116 – Resistance Wire Relay
- L21 – Heater Control Lever Light
- N74 – Series Resistance Wiring
- T1a – Single Connector, below driver's seat*
- T1b – Single Connector, below driver's seat*
- T1c – Single Connector, on B-pillar, left
- T2a – Double Connector, below driver's seat*

- T2b – Double Connector, below driver's seat*
- T4a – 4-Pin Connector, below driver's seat*
- T4b – 4-Pin Connector, below driver's seat*
- T12a – 12-Pin Connector, behind left B-pillar trim, upper part
- T12b – 12-Pin Connector, below driver's seat*

- (34) – Ground connection, below driver's seat*
- * – Located behind lower part of B-pillar trim on vehicles with swivel seat