


Auxiliary heater D2L*, with programmable timer, from August 1992

Relay location

For relay location and multiple connectors location see also section "component locations".

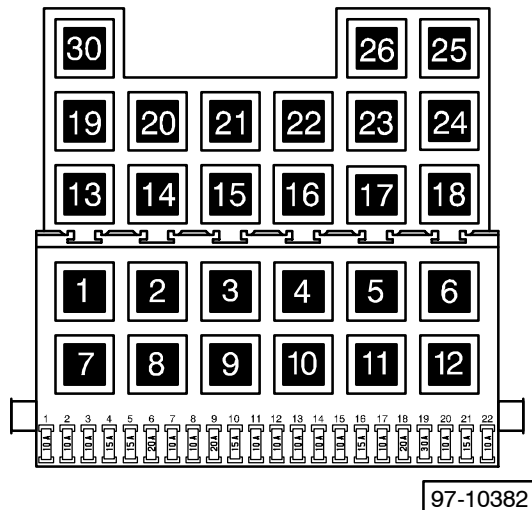


Fuse colors

30A – green
25A – white
20A – yellow
15A – blue
10A – red

* – Type 25172501, see identification plate


30
15
X
31

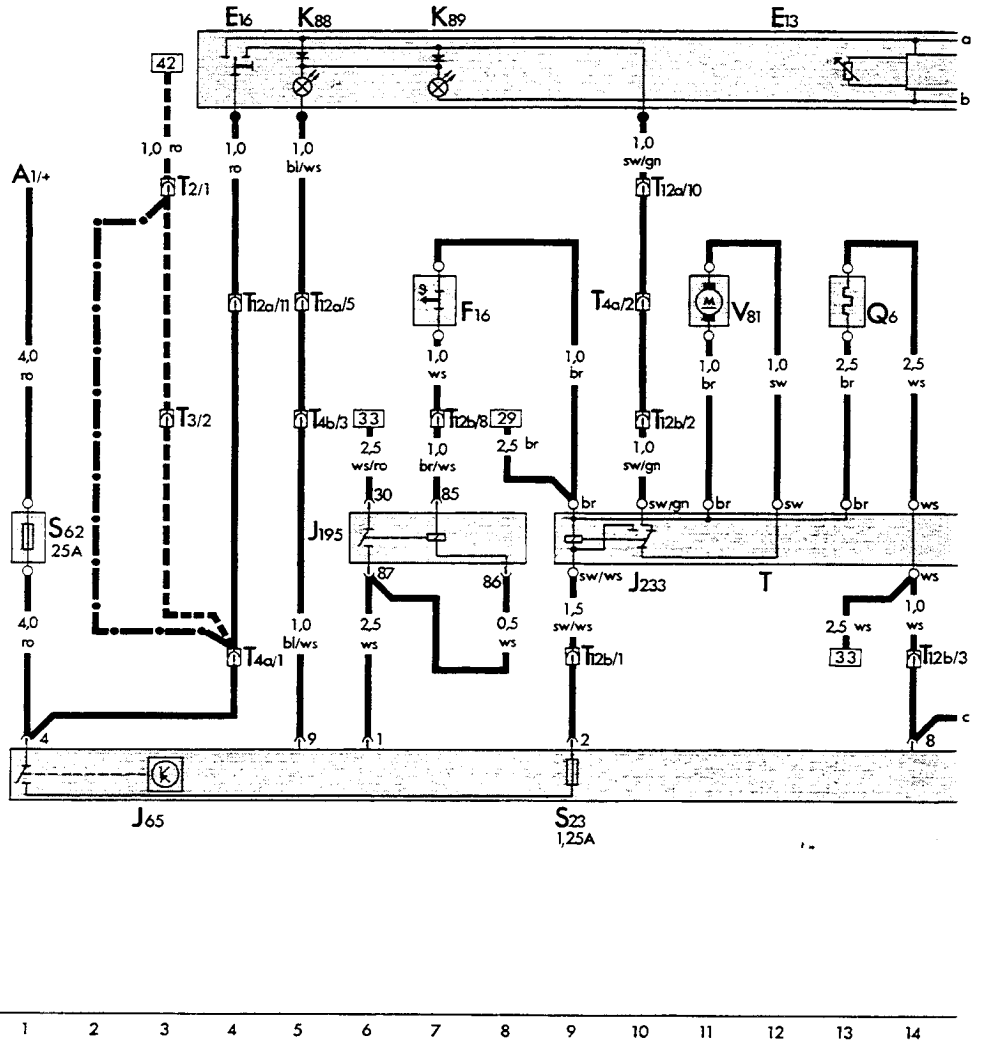

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

- A1 – Auxiliary Battery
 - E13 – Heater-Time Temperature Control Switch, on left B-pillar, upper part
 - E16 – Heater/Heat Output Switch
 - F16 – Heater Flame Sensor
 - J65 – Heater Control Module, below driver's seat*
 - J195 – Glow Plug Control Relay, below driver's seat*
 - J233 – Auxiliary Heater Blower Relay
 - K88 – Water Heater Malfunction Light (red)
 - K89 – Water Heater On Light (green)
 - Q6 – Engine Glow Plug
 - S23 – Heater Fuse
 - S62 – Auxiliary Heater Fuse, below driver's seat**
 - T – Junction Box (printed circuit board)
 - T2 – Double Connector, below driver's seat*
 - T3 – 3-Pin Connector, below driver's seat*
 - T4a – 4-Pin Connector, below driver's seat*
 - T4b – 4-Pin Connector, below driver's seat*
 - T12a – 12-Pin Connector, behind left B-pillar trim, upper part
 - T12b – 12-Pin Connector, below driver's seat*
 - V81 – Fresh Air/Heater Blower
- * – Located behind lower part of left B-pillar trim on vehicles with swivel seat
 ** – Located on lower part of left B-pillar on vehicles with swivel seat
- – "Camper" only
 - - - – Not on "Camper"

97-10041

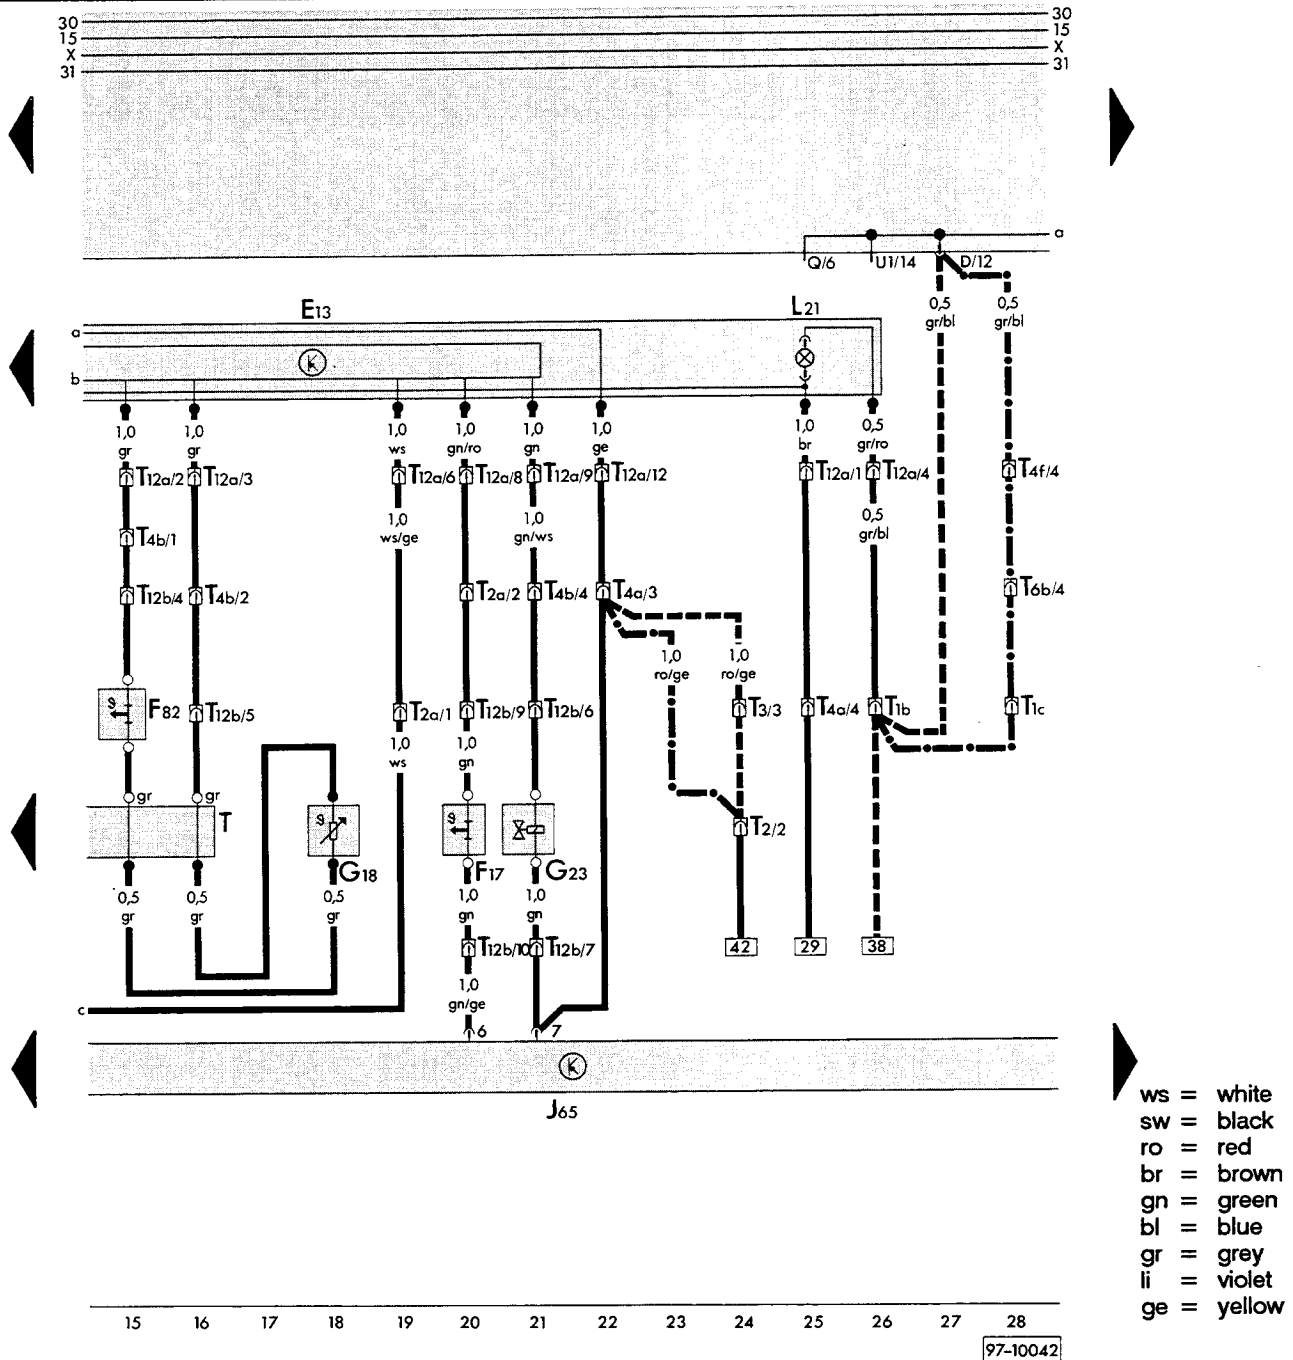

E13 – Heater-Time Temperature Control Switch, on left B-pillar, upper part

E20 – Instrument Panel Light Dimmer Switch

F17 – Heater Overheat Control Switch

F 82 – Temperature Limiting Switch

G18 – Temperature Sensor

G23 – Transfer Fuel Pump (FP)

J65 – Heater Control Module, below driver's seat*

L21 – Heater Control Lever Light

T – Junction Box (printed circuit board)

T1b – Single Connector, below driver's seat*

T1c – Single Connector, on B-pillar, left

T2 – Double Connector, below driver's seat*

T2a – Double Connector, below driver's seat*

T3 – 3-Pin Connector, below driver's seat*

T4a – 4-Pin Connector, below driver's seat*

T4b – 4-Pin Connector, below driver's seat*

T4f – 4-Pin Connector, behind fuse/relay panel

T6b – 6-Pin Connector, on left A-pillar, upper part


T12a – 12-Pin Connector, behind left B-pillar trim, upper part

T12b – 12-Pin Connector, below driver's seat*

* – Located behind lower part of B-pillar trim on vehicles with swivel seat

--- – "Camper" only

— — – Not on "Camper"

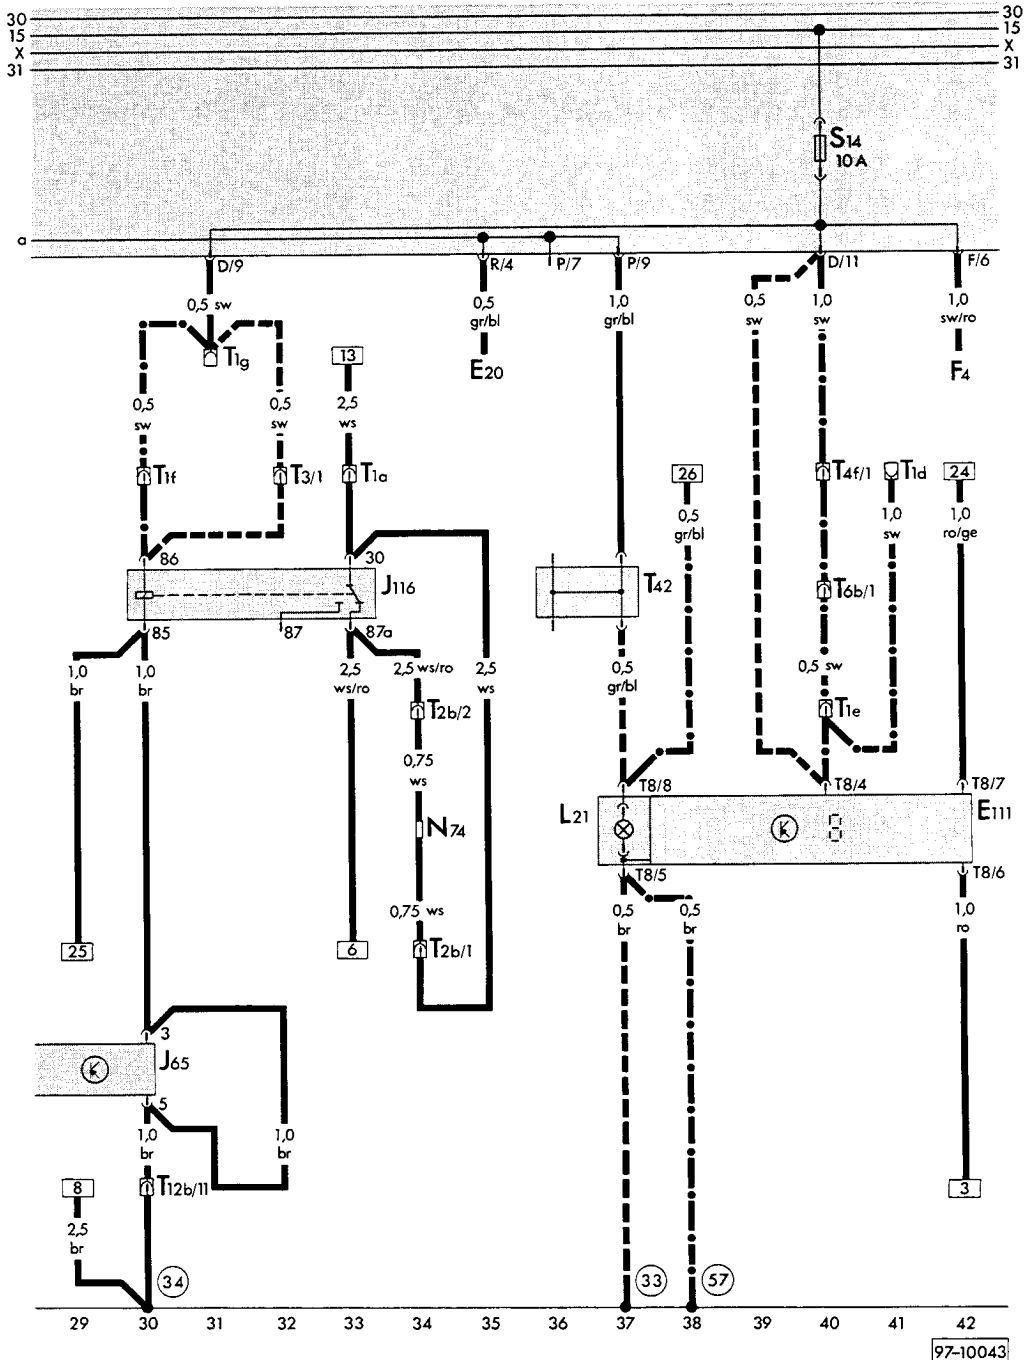

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

- E111 – Programmable Timer, in instrument panel, center
- F4 – Back-Up Light Switch
- J65 – Heater Control Module, below driver's seat*
- J116 – Resistance Wire Relay, below driver's seat*
- L21 – Heater Control Lever Light
- N74 – Series Resistance Wiring
- T1a – Single Connector, below driver's seat*
- T1d – Single Connector, on B-pillar, left
- T1e – Single Connector, on B-pillar, left
- T1f – Single Connector, below driver's seat*
- T1g – Single Connector, behind fuse/relay panel
- T2b – Double Connector, below driver's seat*
- T3 – 3-Pin Connector, below driver's seat
- T4f – 4-Pin Connector, behind fuse/relay panel

- T6b – 6-Pin Connector, on left A-pillar, upper part
- T8 – 8-Pin Connector
- T12b – 12-Pin Connector, below driver's seat*
- T42 – Wire Connector, Terminal 58B
- 33 – Ground connection, behind instrument panel, right
- 34 – Ground connection, below driver's seat*
- 57 – Ground connection, on left rear B-pillar
- * – Located behind lower part of left B-pillar trim on vehicles with swivel seat
- (dashed line) – "Camper" only
- (solid line) – Not on "Camper"

97-10043