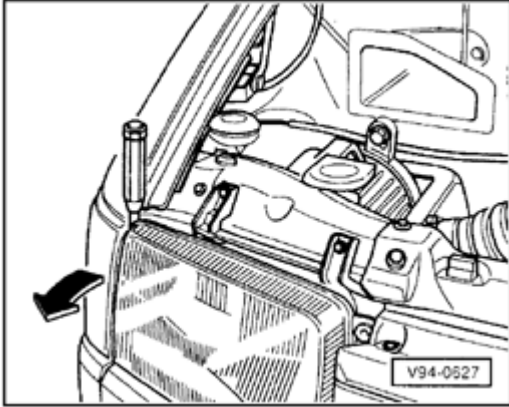



Front turn signals > 05.96, servicing

Front turn signal housing, removing and installing

**A**

- Press locking lug to side and pull turn signal housing out forward from headlight housing in direction of arrow.

Turn signal bulb, removing and installing

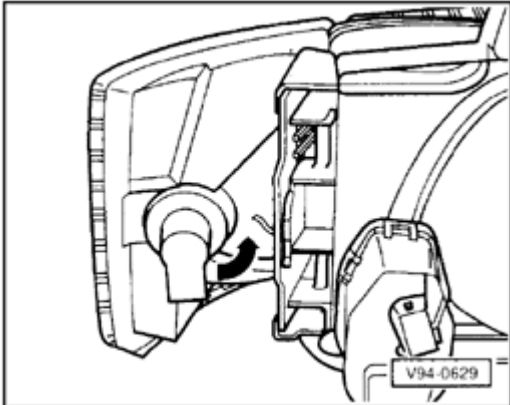

A

- Turn coupling inward in direction of arrow and pull out of housing.
- Remove bulb from holder.

CAUTION!

DO NOT touch glass portion of bulb. Moisture and contaminate residue from fingers will result in premature bulb failure.

- When installing, the coupling must be turned (opposite to direction of arrow) until it engages.