

Tail lights, servicing

Brake/tail and turn signals, removing and installing

1 - Tail light housing

◆ Removing

⇒ 1

2 - Gasket

3 - Backup light bulb - left/right

12V / 21W

4 - Turn signal bulb - left/right


◆ 12V / 21W

5 - Brake and tail light bulb - left/right

◆ 12 V, 21 W/5 W

6 - Bulb holder

7 - Hex nut M5 with washer

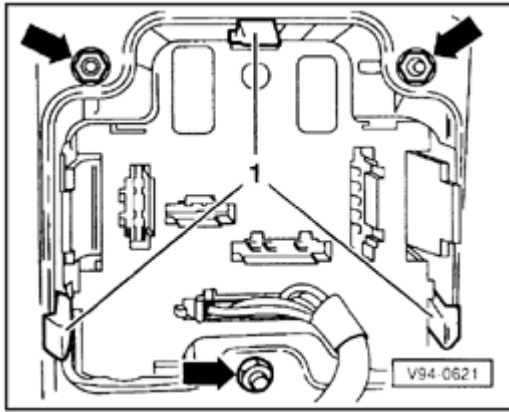


A

Fig. 1 Tail light housing, removing

- Remove connector from bulb carrier.
- Remove hex nuts -arrows-.
- Release lugs -1- and remove housing by turning.
- Reassemble in reverse sequence

License plate lights, removing

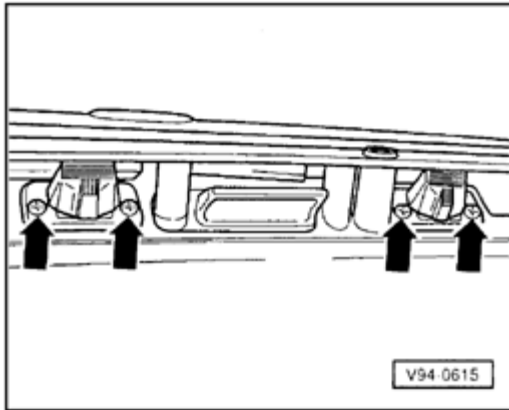

A

- Remove screws -arrows- from the respective license plate light and take out light.

Note:

- *The light upper section engages in the base plate and by tilting both parts slightly, can be removed to facilitate bulb changing.*