


Headlights > 05.96, servicing

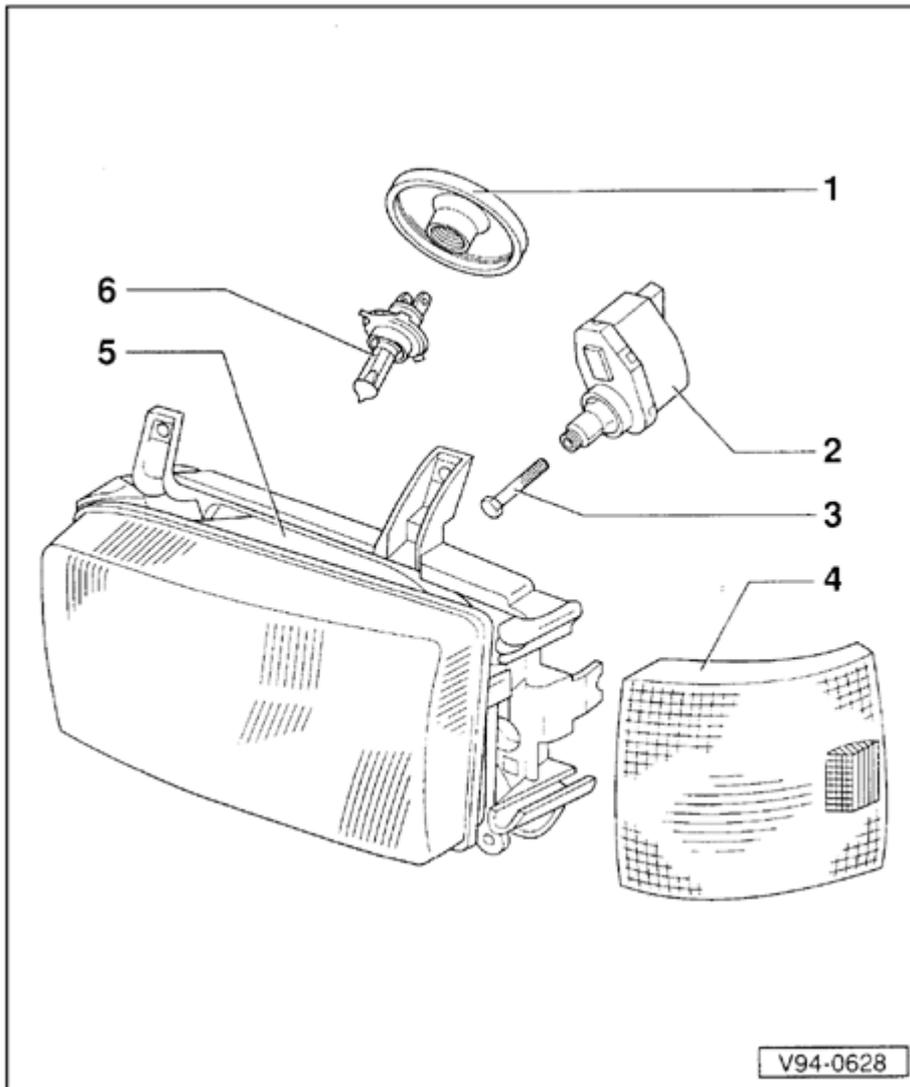

CAUTION!

Before beginning repairs on the electrical system:

- ◆ **Obtain the anti-theft radio security code.**
- ◆ **Switch the ignition off.**
- ◆ **Disconnect the battery Ground (GND) strap.**
- ◆ **After reconnecting battery, re-code and check operation of anti-theft radio. Also check operation of clock and power windows according to Repair Manual and/or Owner's Manual.**


Note:

After any work which could affect the headlight setting, the headlight must be adjusted.

1 - Cap

2 - Positioning motor (if equipped)

3 - Adjuster for positioning motor (if equipped)

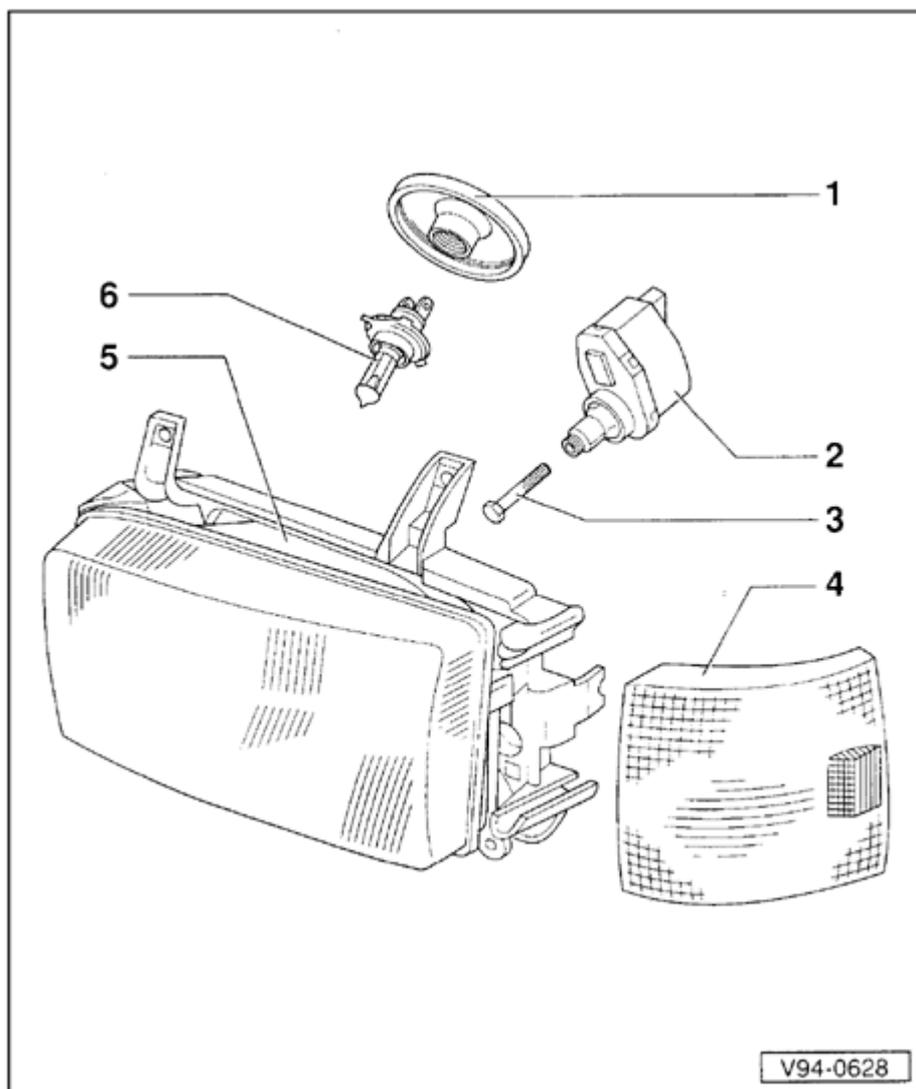

4 - Front turn signal housing

- ◆ Removing

⇒ [page 94-11](#)

- ◆ Removing and installing turn signal bulb

⇒ [page 94-12](#)

5 - Headlight housing

- ◆ Removing and installing

⇒ [page 94-4](#)

- ◆ Adjusting headlight

⇒ [page 94-5](#)


6 - Low and high beam twin filament bulb

- ◆ Halogen bulb
H4 - 12 V, 60 W/55 W

- ◆ Removing and installing

⇒ [page 94-3](#)

Low and high beam twin filament bulb, removing and installing

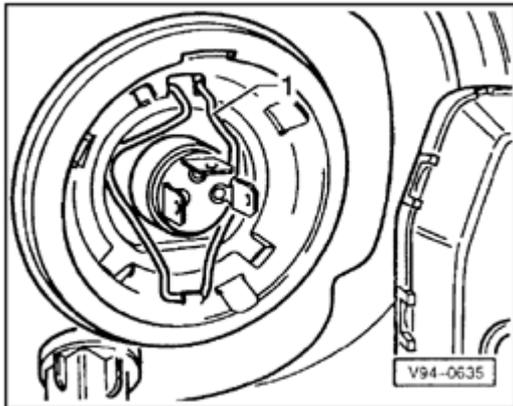

A

- Pull electrical connector from bulb.
- Remove cap on rear of headlight insert.
- Release spring retainer -1- and fold down.
- Take bulb out of reflector.

Installing

CAUTION!

DO NOT touch glass portion of bulb. Moisture and contaminate residue from fingers will result in premature bulb failure.

- Insert new bulb so that the lugs on the laminated plate align with the grooves in the reflector.
- After installing a new bulb check headlight adjustment.


Headlight housing, removing and installing

Note:

After installing headlight housing check headlight and adjust if necessary.

- Remove cross panel below headlight

⇒ [Repair Manual, Body Exterior, Repair Group 50](#)

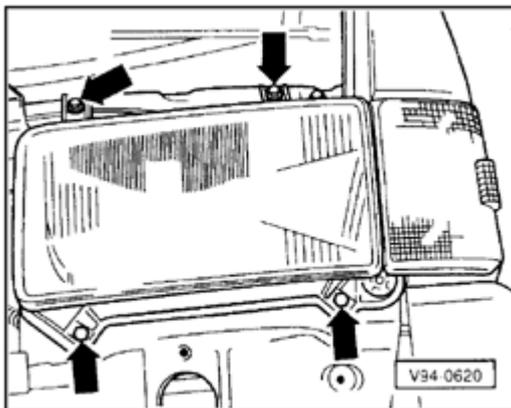

A

- Remove securing screws -arrows- and pull headlight out forward.
- Disconnect headlight and turn signal multi-pin connector.


Headlights, adjusting

Note:

For headlight checking and adjustment specifications

⇒ [Repair Manual, Maintenance](#)

- Headlight range control adjuster (if equipped) in basic setting

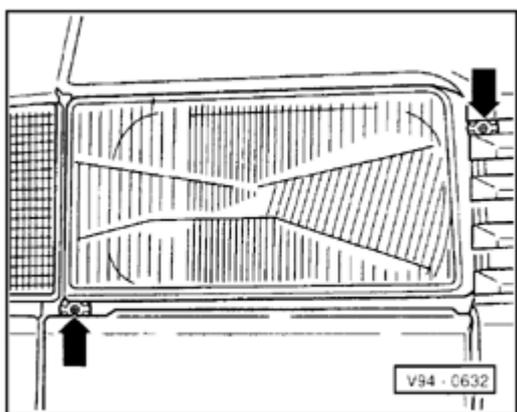

- Adjust right-hand headlight using a Philips screwdriver at adjustment screws -arrows-.

Upper adjustment screw - lateral adjustment

Lower adjustment screw - height adjustment

Note:

Both left headlight adjustment screws are located in mirror image.