

Steering column, steering column tube and steering wheel from 09.98, assembly overview

Note:

- ◆ Always replace self-locking nuts and bolts.
- ◆ Welding or straighten work on any steering components is not permissible.
- ◆ All parts identified with¹⁾ must be assembled outside the vehicle.

1 - Airbag unit

- ◆ Removing and installing ⇒ [Page 48-27](#)

2 - Hex-nut, tighten to 67 Nm.

3 - Washer

4 - Steering wheel for airbag

- ◆ Removing and installing ⇒ [Page 48-32](#)

- ◆ Return ring, removing and installing ⇒ [Page 48-33](#)

