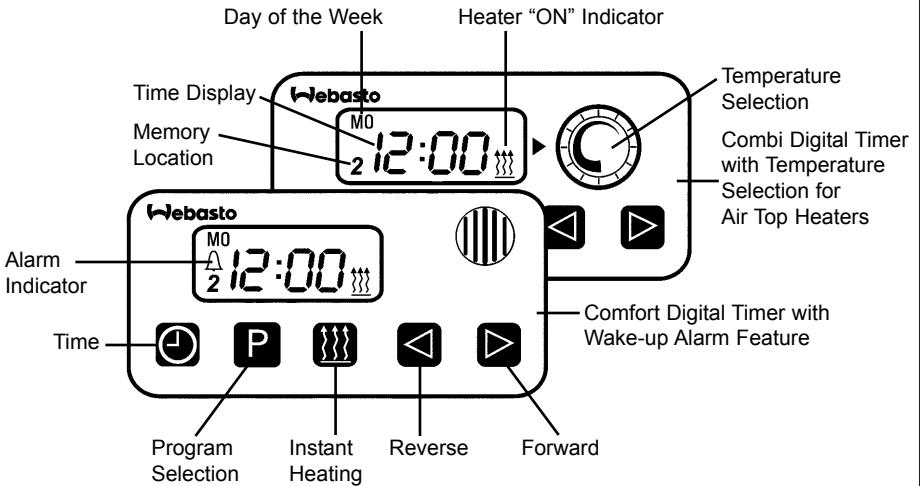





























# Operating Instructions “Comfort and Combi” 7 Day Digital Timer Model 1531



<p><b>General</b></p>	<p>The comfort and combi digital timer enables you to preset the start of the heater operation up to 7 days in advance.</p> <p>It is possible to program 3 different starting times, only one of which can be activated at any one time and one event (desired programmed event must be initiated each time required).</p> <p>The comfort timer features a wake-up alarm while the combi timer features a temperature controller for use with Air Top heaters. When the ignition is switched on, the timer displays the current time and day of the week. When the heater is switched on, the display and buttons are illuminated.</p> <p>After the power supply has been connected, all symbols on the display will flash. The current time and weekday must be set.</p>
<p><b>Operation</b></p>	<p>The timer can be operated in that all flashing symbols can be adjusted by means of the ◀ and ▶ buttons.</p> <p>If no adjustments are made within 5 seconds, the current setting displayed will be stored in memory. If the ◀ and ▶ buttons are pressed for more than 2 seconds, the fast time-setting mode is activated.</p> <p>If the ignition is switched off while the heater is operating in the continuous mode, the remaining operating time of 15 minutes is displayed and the heater continues to operate for this period of time.</p> <p>Whenever the power supply to the timer is disconnected, all previously programmed settings will be lost.</p>
<p><b>Air Top and Thermo Series Heaters</b></p>	<p>Air Top and Thermo Series heaters are equipped with a fault diagnostic system. A numeric code will appear on the display in the event of a failure. Refer to your operating instruction manual for corrective information.</p>

<b>Switching the heater on</b>	Manually: by pressing the  button (continuous heating mode). Automatically: by programming the heater starting time. The  button will be illuminated during operation.
<b>Switching the heater off</b>	Manually: by pressing the  button. Automatically: after the programmed operating time has elapsed. With the heater running: by programming the remaining operating time. The  button light and operation indicator will extinguish.
<b>Setting time and day of the week</b>	Press the  button for more than 2 seconds - time of the day is flashing - and set the clock using the  and  buttons. Day of the week is flashing - adjust the day of the week.
<b>Viewing the time</b>	With the ignition switched off: press the  button.
<b>Programming heater starting time</b>	Press the  button - the memory location is flashing - using the  and  buttons, set start of the heater operating time. Day of the week is flashing - set the day of the week. By repeatedly pressing the  button, memory locations 2 and 3 can be programmed or the time display mode can be reached.
<b>Recalling/ erasing the preset times</b>	Repeatedly press the  button until the desired memory location is displayed. To erase the preset time, press the  button several times until the time of the day is displayed instead of the memory location.
<b>Programming duration of operating time</b>	The heater must be switched off. Press and hold the  button for 3 seconds - operating time is flashing - and set the desired operating time (10 to 120 minutes) using the  and  buttons.
<b>Setting the remaining operating time</b>	Set the desired remaining operating time (1 to 120 minutes) using the  and  buttons. The remaining operating time refers to the time the heater still continues to remain in operation. It can only be changed while the heater is in operation and the ignition is switched off.
<b>Setting the wake-up alarm time</b>	The wake-up alarm feature is only available on the comfort timer. The wake-up time is not bound to a specific day of the week. To set, repeatedly press the  button until the bell symbol  appears on the display. Set the desired wake-up time using the  and  buttons. The wake-up alarm will shut off after 5 minutes or when one of the buttons is pressed.
<b>Recalling/ erasing the wake-up alarm time setting</b>	Repeatedly press the  button until the bell symbol  appears on the display and read off the wake-up time setting. To erase the wake-up time: press the  button until the bell symbol  is no longer visible on the display.

**Webasto Product N.A., Inc.**

15083 North Road  
Fenton, MI 48430

**Technical Assistance Hotline**

USA: 1-800-555-4518  
Canada: 1-800-667-8900

[www.webasto.us](http://www.webasto.us)

